


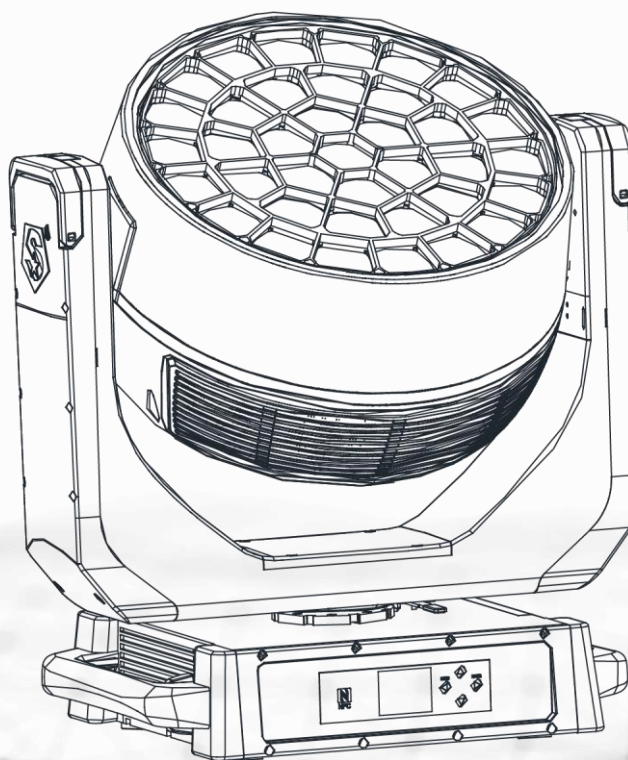

NEPTUNE NW10-XT
SS9691XCAM


PROFESSIONAL STAGE LIGHTING OEM & ODM MANUFACTURER

1 PRODUCT

1.1 TECHNICAL SPECIFICATIONS

Type	SS9691XCAM
LED colors	37PCS*50W RGBWA LED
Angle	Beam Angle: 3.5°~35°, Field Angle: 6°~ 60°
Power	1600W
Control Protocol	DMX512,RDM,ARTNET,SACN, NFC,CRMX(optional)
Voltage Range	100-240V~
Frequency Range	50/60Hz
Input Current	110V/14.5A,220V/7.3A
Protection	IP66
Operation Temperature	-20℃~45℃
Dimensions	552x368x632mm
Weight	38kg

DIMENSIONS

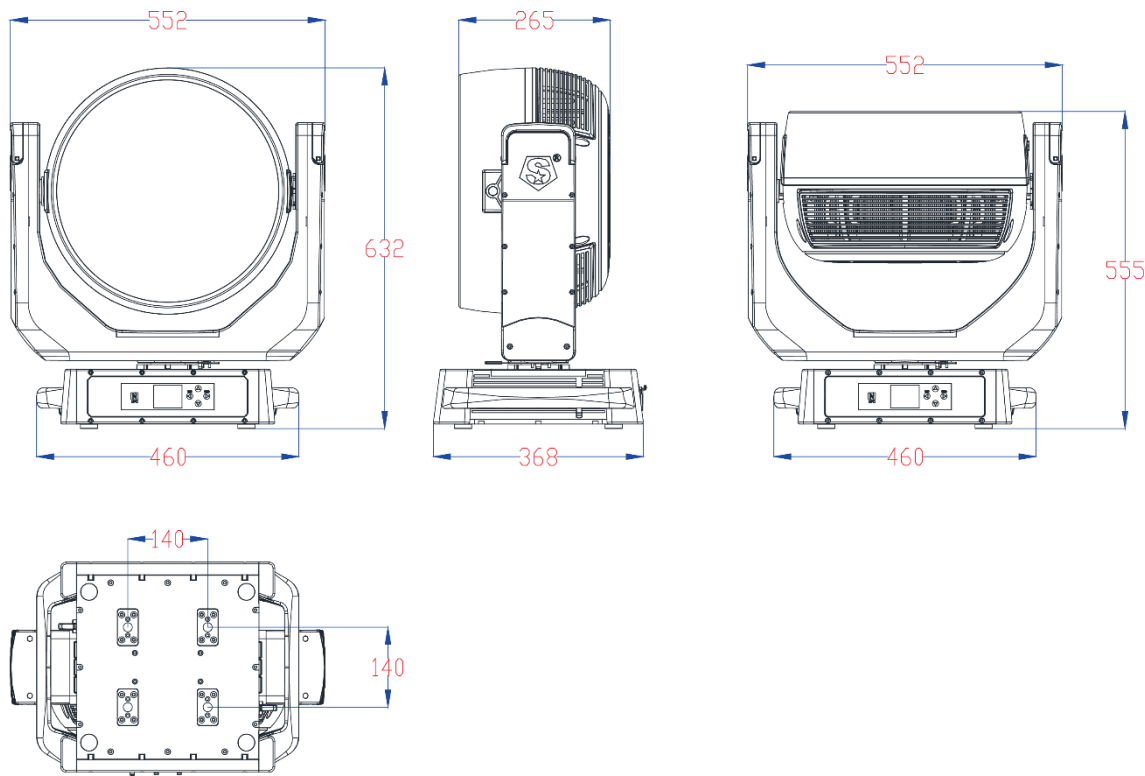

1.2 Safety Notes

IMPORTANT

- This product must be installed by a qualified professional.
- In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes
- The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

CAUTION!

- Make sure that the available voltage is not higher than stated on the rear panel.
- Do not touch the power cables if your hands are wet.
- The earth wire must always be connected to the ground. Therefore it is essential to connect the yellow/green conductor to earth.
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time. The electric connection, repairs and servicing must be carried out by a qualified employee.
- Always disconnect power input cable to completely remove power from unit when not in use or before cleaning or servicing the fixture.
- Do not switch the fixture on and off in short intervals as this would reduce the LED's life.
- Do not touch the device's housing bare hands during its operation (housing becomes hot)! The surface of the product's casing can reach up to 65° C (149° F) during operation. Avoid contact by persons and materials. Do not install the product in a location where there is a risk of accidental contact. Allow the product to cool for at least 10 minutes before handling.
- For replacement use lamps and fuses of same type and rating only.
- Please protect the fixture and avoid destroy during transport and installation. If there is any damage to the coating, the shell may be corroded.
- When hanging LEDs and lanterns, it is necessary to verify that facilities and hooks can bear at least 10 times the weight of lamps and lanterns.
- Fix the safety rope at the correct holes only. Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- The maximum ambient temperature 45°C must never be exceeded. Do not operate the product if the ambient temperature (Ta) exceeds 45° C (115° F).
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Electrical Warning

- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person
- For replacement use lamps and fuses of same type and rating only.
- The lens has to be replaced when it is obviously damaged, so that its function is impaired, e. g. due to cracks or deep scratches!

Keep the product well away from flammable materials

- Keep all combustible materials (e.g. fabric, wood, paper) at least 500 mm (20 in.) away from the product.
- Ensure that there is free and unobstructed airflow around the product. Provide a minimum clearance of 150 mm (6 in.) around fans and air vents.
- Do not illuminate surfaces within 1m (3.2ft.) of the product.
- Do not install a fuse that has a higher rating than the one originally installed in the product. Do not bypass fuses.
- Do not stick filters, masks or other materials onto optical components.
- If the fixture seems to be abnormally hot, shows signs of melting or emits smoke, disconnect the fixture from power immediately and allow it to cool. Do not touch the fixture without heatproof safety gloves. Keep the fixture well away from combustible and flammable materials.

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!
RETINA INJURY RISK - MAY INDUCE BLINDNESS!**

Do not point the front of the fixture towards the sun or other strong light sources. The front lens focuses and concentrates light just like a magnifying glass. Strong light can cause internal damage to the fixture, melting components or starting an internal fire within seconds.

To avoid problems from strong light sources:


- Do not expose the front of a fixture to sunlight or any other strong light source. Avoid pointing other high-powered beam lights directly at the fixture.
- Do not focus a light beam from one lighting fixture directly towards another.
- For outdoor applications during daylight, make sure that the front face of any fixture is shielded or points away from the sun, even when not in use.
- Do not expose the product to heat (from other lighting fixtures for example).

2 INSTALLATION

2.1 MOUNTING


Truss installation

- ◆ Keep all combustible materials (e.g. fabric, wood, paper) at least 500 mm (20 in.) away from the product.
- ◆ For overhead use, always install a safety cable that can hold at least 10 times the weight of the fixture.
- ◆ For overhead installation, the fixture must be always secured with a safety wire that can bear at least 10 times the weight of the fixture;
- ◆ Secure the fixture with a safety cable through the rear safety eye and truss as shown..
- ◆ Ensure that the structure (truss) to which you are attaching the fixture is secure

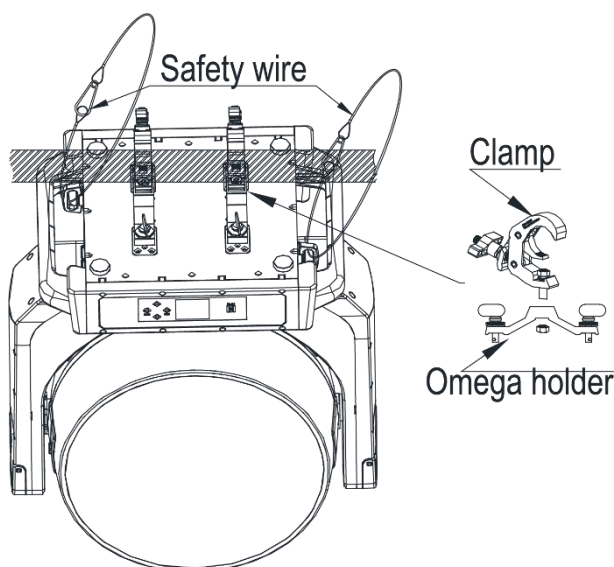

2.2 Fuse replacement

- ◆ Remove the safety cap by a screwdriver.
- ◆ Fetch the old fuse from safety cap.
- ◆ Install a new fuse.
- ◆ Install the safety cap.

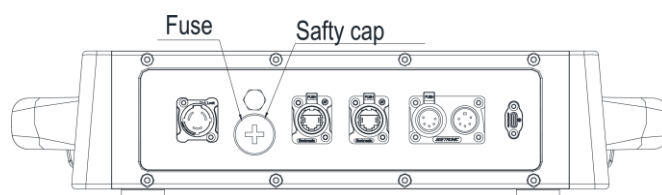

2.3 POWER CONNECTIONS


- ◆ This product has an auto-ranging power supply that can work with an input voltage range of 100–240 VAC, 50/60 Hz.

AC Plug

Connection	Wire (U.S.)	Wire(Europe)	Screw Color
AC Live	Black	Brown	Yellow/Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green


2.4 Data network requirements

- ◆ Connect the DMX512 controller to the units in series. A DMX 512 data link is required in order to control the fixture via DMX. The fixture has 3/5-pin XLR connectors for DMX data input and output.
- ◆ Each unit has N DMX channels so the DMX Addresses should increase by increments of 1, (Nx1)+1, (Nx2)+1, (Nx3)+1...
- ◆ Any DMX address in the range from 001 to 512 may be used.
- ◆ Connect the DMX-output of the first fixture in the DMX chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.
- ◆ Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (-) and Signal (+) into a 3/5-pin XLR-plug and plug it in the DMX-output of the last fixture.

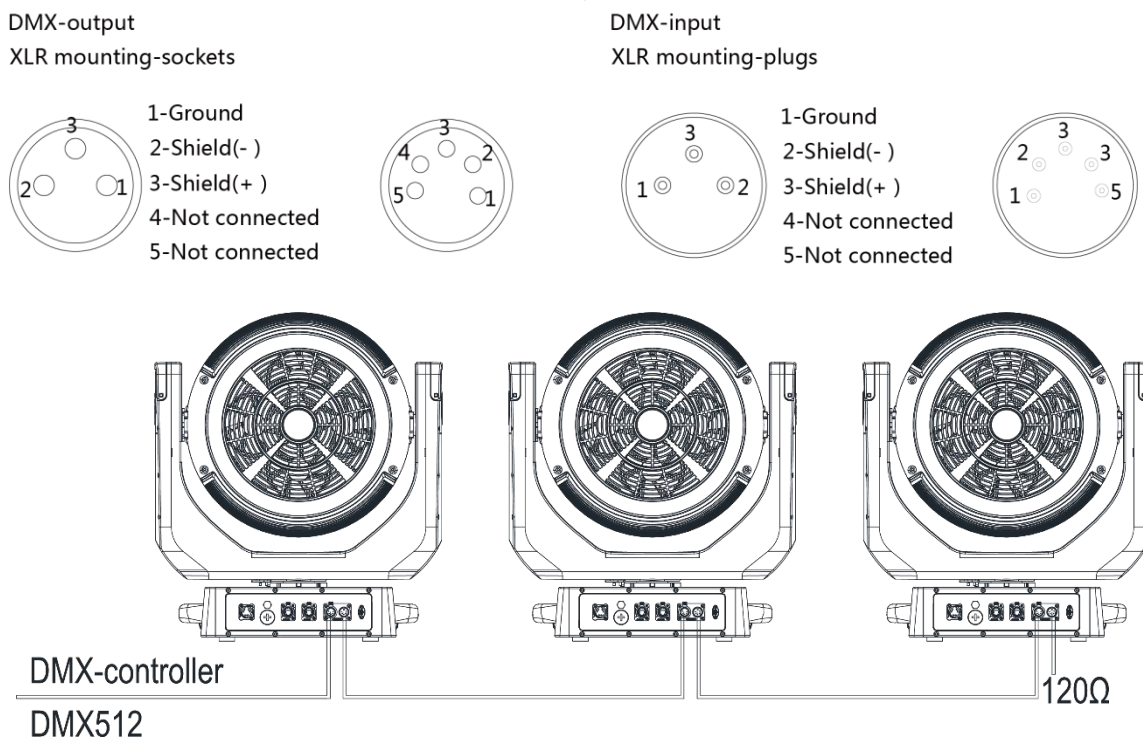

2.5 Update software


- ◆ Steps of updating software with USB-C interface:
 1. Insert USB-C U dish into USB-C interface
 2. After finding "Upgrade Software" in the menu, Find the corresponding software and click OK

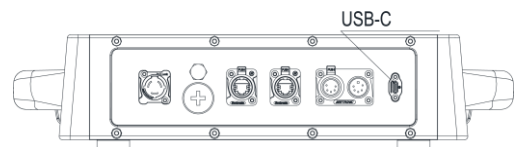

3 FUNCTIONS AND SETTINGS

3.1 DISPLAY OPERATION

- ◆ LEFT: Used to access the menu or to return a previous menu option;
- ◆ RIGHT: Used to select and store the current menu or confirm the current function value or option within a menu;
- ◆ UP: Navigates downwards through the menu list and increases the numeric value when in a function;
- ◆ DOWN: Navigates upwards through the menu list and decreases the numeric value when in a function;
- ◆ When the display locked, please unlock the display as below:
 1. Keep pressing BACK around 5sec, until the display shows inset password.
 2. Press “up down up down, enter” to unlock.

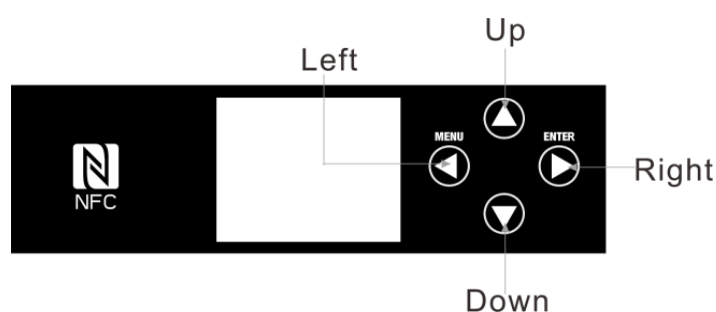

3.2 Menu Map

ADDRESS	001 – 512(Default 001)		DMX address setting
PERSON	HSIC		Use the menu to select desired channel mode
	SSP		
	TOUR(Default)		
	TR16		
	CMY		
	PIXEL		
RUNMODE	DMX512 (Default)		Select Signal
	ARTNET		Default: DMX512
	ARTNET2DMX		CUSTOM 1-2 Set up get into EDIT
	sACN		MENU edit
	AUTO		
	CUSTOM1		
	CUSTOM2		
OPTION	PAN INVERT	OFF(Default)	PAN moving direction selection
		ON	
	TILT INVERT	OFF(Default)	TILT moving direction selection
		ON	
	PAN DEGREE	630	PAN moving degree selection
		540(Default)	
	PERFORM	STUDIO	Fan mode low speed
		POWER	Fast rotation of fan, all power

		LIVE (Default)			Automatic rotation of fan	
	BLACKOUT	OFF (Default)			Select OFF blackout without delay	
		ON			Select ON Blackout delay 3s	
	PT ENCODER	OFF			XY Encoder switch.	
		ON(Default)			OFF is close; ON is open.	
	DIMMER	DIM4 (Default)			Dimming speed OFF (fast) to DIM4 (slow):	
		OFF				
	DIMMER CURVE	LINEAR			Dimmer curves selection	
		SQUARE LAW(Default)				
		INV. SQUARE LAW				
		S-CURVE				
	LED PWM	1200Hz (Default)			Sets the PWM frequency	
		2400Hz				
		4000Hz				
		6000Hz				
		25000Hz				
	DMX ERROR	SAVE (Default)			Hold after loss of DMX signal	
		BLACK			Blackout after loss of DMX signal	
	DISP TIME	On			Display backlight always on	
		30s (Default)			Turns off display backlight after 30s/1min/2min of inactivity	
		1min				
		2min				
	DISPLAY LOCK	OFF			Locks display (passcode is <UP>, <DOWN>,<UP>, <DOWN>, <ENTER>)	
		ON (Default)				
	LOAD PARA	OFF(Default)			Upload data	
		ON			Not upload data	
	SETTING	RECOVERY	****			Restore default factory settings.
		CLEAN EDIT1	****			Clean customer self-editing scene 1
		CLEAN EDIT2	****			Clean customer self-editing scene 2
		WDMX HIDE	YES			Hide wireless mode WDMX reset and signal hide and the default is wired mode only
			NO			
	Color Cali	OFF				Full power mode
		User Calibration	RED	0-255		Manual calibration mode
			GREEN	0-255		
			BLUE	0-255		
			WHITE	0-255		
			AMBER	0-255		
		Factory Calibration (Default)				Factory calibration mode
	NETWORK	NET SWITCH	2.xxx.xxx.xxx		Net switch off IP mode	
			10.xxx.xxx.xxx		Packet group Settings	
		UNIVERS	0-255		Default IP	
		IP MODE	DEFAUL IP		Customer's IP	
			CUSTOM IP		Customer's IP setting	
		CUSTOM IP	XX.XX.XX.XX		Net switch off IP mode	

	LANGUAGE	****	Chinese		LANGUAGE	
			English(Default)			
	WDMX RESET	YES				Do not clear the receiver's message.
		NO				Clear the receiver's message
	SIGNAL	ONLY XLRDMX(Default)				ONLY XLR is wire only
		XLRDMX FIRST				XLR FIRST is wire first
		ONLY WDMX				ONLY WDMX is wireless only
		WDMX FIRST				WDMX FIRS is wireless first
WDMX TO XLRDMX				WDMX TO DMX is wireless to wired		
EDIT	EDIT 1-2	STEP 1-30	PAN	0-255	Edit the custom programs1-30 Select play 【EDIT 1】 in RUNMOEDE CUSTOM 1; Select play 【EDIT 2】 in RUNMOEDE CUSTOM 2	
			TITL	0-255		
			ZOOM	0-255		
			RED	0-255		
			GREEN	0-255		
			BLUE	0-255		
			WHITE	0-255		
			AMBER	0-255		
			STROBE	0-255		
			PRESET COLOR	0-255		
			CCT	0-255		
			TIME	0-255		
			USE	YES/NO		Select YES to run the steps user need.
		MANUAL	Auto Test			
CHANNEL	PAN		0-255		Manual control channel	
	TITL		0-255			
	ZOOM		0-255			
	RED		0-255			
	GREEN		0-255			
	BLUE		0-255			
	WHITE		0-255			
	AMBER		0-255			
	STROBE		0-255			
	PRESET COLOR		0-255			
	CCT		0-255			
	CCT		1800K			
2200K						
2700K						
3000K						
3200K						
4000K						
4500K						
5000K						
5600K						
6000K						
6500K						

		7000K		
		8000K		
		10000K		
	PRESET COLOR	COLOR 1		Preset color（See Annex I for details）
		COLOR 2		
		...		
		COLOR 24		
	CMY	CYAN		Cyan、Magenta、Yellow color
		MAGENTA		
		YELLOW		
		C+M		
		C+Y		
		M+Y		
	DEBUG HIDE	NO		Factory testing mode. All stepper motors are not controlled by signal, It only works again after the reset.
		YES		
	RESET	ALL RESET		Select Yes/No to carry out all reset
		XY RESET		Select Yes/No to carry out P/T reset
		ZOOM		Zoom/ Focus/ Prism reset
SERVICE	****	PAN	±127	Pan position fine adjustment
		TILT	±127	Tilt position fine adjustment
		ZOOM	±127	Zoom position fine adjustment
INFO	FIXTURE HOURS			Hours of fixture use
	LED USE HOURS			LED use time
	TEMPERATURE			LED temperature
	VERSION			Software versions
	NETWORK			Check network parameter
	RDM	UID	0x388Axxxxxxx	Check fixture's ID
		LABEL		Check fixture's LABEL
	SYSTEM ERROR	MEMORY IC		Memory IC
		ANGLESENSOR		Angle Sensor
		PAN SENSOR		Pan Sensor
		PAN ENCODER		Pan Encoder
		PAN DRIVEIC		Pan Drive IC
		TILT SENSOR		Tilt Sensor
		TILT ENCODER		Tilt Encoder
		TILT DRIVEIC		Tilt Drive IC
TEMPERATURE		Temperature		
NetworkIc		NetworkIc		
UPDATE SOFTWARE				USB-C Update software
All passwords of this product are: <UP>, <DOWN>,<UP>, <DOWN>, <ENTER>				

4 USING A DMX512 CONTROLLER

4.1 DMX CONTROL

HSIC (15CH)	Value	Function
1	0-255	PAN
2	0-255	PAN FINE
3	0-255	TITL
4	0-255	TITL FINE
5	0-255	PT SPEED
6	PAN Motor continuous rotation	
	0-63	stop rotation by spinout
	64-127	stop rotation by shortcut
	128-189	Forwards Pan rotation from fast to slow
	190-193	No rotation
	194-255	Backwards Pan rotation from slow to fast
7	0-255	INTENSIYT
8	0-255	HUE
9	0-255	HUE FINE
10	0-255	SATURATION
11	CCT	
	0-9	NO FUNCTION
	10	1800K
	25	2200K
	40	2700K
	55	3000K
	70	3200K
	85	4000K
	100	4500K
	115	5000K
	130	5600K
	145	6000K
	160	6500K
	175	7000K
	190	8000K
	205	10000K
	255	10000K
12	0-255	CRI from min. to max
13	STROBE	
	0-9	NO FUNCTION
	10-99	STROBE FROM (SLOW TO FAST , 0-25Hz)
	100-109	NO FUNCTION
	110-179	LIGHTNING STROBE
	180-189	NO FUNCTION
	190-255	RANDOM STROBE
14	0-255	ZOOM

15	CONTROL (EXECUTE AFTER 3 SECONDS)	
	0-10	NO FUNCTION
	11-15	PAN/TILT BLACK ACTIVATED
	16-20	PAN/TILT BLACK DEACTIVATED
	21-25	PAN INVERT
	26-30	TILT INVERT
	31-35	PAN/TILT INVERT OFF
	36-40	PAN DEGREE 630
	41-45	PAN DEGREE 540
	46-100	RESERVED
	101-105	STUDIO
	106-110	POWER
	111-115	LIVE
	116-130	RESERVED
	131-135	DIMMER SPEED Halogen
	136-140	DIMMER SPEED LED
	141-145	DIMMER CURVE LINEAR
	146-150	DIMMER CURVE SQUARE LAW
	151-155	DIMMER CURVE INV. SQUARE LAW
	156-160	DIMMER CURVE S-CURVE
	161-165	1200Hz
	166-170	2400Hz
	171-175	4000Hz
	176-180	6000Hz
	181-185	25000Hz
	186-200	RESERVED
	201-205	ALL RESET
	206-210	XY RESET
	211-215	ZOOM RESET
	216-250	RESERVED
	251-255	NO FUNCTION

SSP (13CH)	TOUR (18CH)	TR16 (24CH)	Value	Function
1	1	1	0-255	PAN
	2	2	0-255	PAN FINE
2	3	3	0-255	TITL
	4	4	0-255	TITL FINE
3	5	5	0-255	PT SPEED
4	6	6	PAN Motor continuous rotation	
			0-63	stop rotation by spinout
			64-127	stop rotation by shortcut
			128-189	Forwards Pan rotation from fast to slow
			190-193	No rotation
			194-255	Backwards Pan rotation from slow to fast
5	7	7	0-255	RED

		8	0-255	RED FINE
6	8	9	0-255	GREEN
		10	0-255	GREEN FINE
7	9	11	0-255	BLUE
		12	0-255	BLUE FINE
8	10	13	0-255	WHITE
		14	0-255	WHITE FINE
9	11	15	0-255	AMBER
		16	0-255	AMBER FINE
10	12	17	0-255	DIMMER
		18	0-255	DIMMER FINE
11	13	19	STROBE	
			0-9	NO FUNCTION
			10-99	STROBE FROM (SLOW TO FAST , 0-25Hz)
			100-109	NO FUNCTION
			110-179	LIGHTNING STROBE
			180-189	NO FUNCTION
			190-255	RANDOM STROBE
	14	20	PRESET COLOR	
			0-10	NO FUNCTION
			11-255	PRESET COLOR (See Annex I for details)
	15	21	CCT	
			0-9	NO FUNCTION
			10	1800K
			25	2200K
			40	2700K
			55	3000K
			70	3200K
			85	4000K
			100	4500K
			115	5000K
			130	5600K
			145	6000K
			160	6500K
			175	7000K
			190	8000K
			205	10000K
			255	10000K
	16	22	0-255	CRI from min. to max
12	17	23	0-255	ZOOM
13	18	24	CONTROL (EXECUTE AFTER 3 SECONDS)	
			0-10	NO FUNCTION
			11-15	PAN/TILT BLACK ACTIVATED
			16-20	PAN/TILT BLACK DEACTIVATED
			21-25	PAN INVERT
			26-30	TILT INVERT

			31-35	PAN/TILT INVERT OFF
			36-40	PAN DEGREE 630
			41-45	PAN DEGREE 540
			46-100	RESERVED
			101-105	STUDIO
			106-110	POWER
			111-115	LIVE
			116-130	RESERVED
			131-135	DIMMER SPEED Halogen
			136-140	DIMMER SPEED LED
			141-145	DIMMER CURVE LINEAR
			146-150	DIMMER CURVE SQUARE LAW
			151-155	DIMMER CURVE INV. SQUARE LAW
			156-160	DIMMER CURVE S-CURVE
			161-165	1200Hz
			166-170	2400Hz
			171-175	4000Hz
			176-180	6000Hz
			181-185	25000Hz
			186-200	RESERVED
			201-205	ALL RESET
			206-210	XY RESET
			211-215	ZOOM RESET
			216-250	RESERVED
			251-255	NO FUNCTION

CMY(16CH)	Value	Function
1	0-255	PAN
2	0-255	PAN FINE
3	0-255	TITL
4	0-255	TITL FINE
5	0-255	PT SPEED
6	PAN Motor continuous rotation	
	0-63	stop rotation by spinout
	64-127	stop rotation by shortcut
	128-189	Forwards Pan rotation from fast to slow
	190-193	No rotation
	194-255	Backwards Pan rotation from slow to fast
7	0-255	CYAN
8	0-255	MAGENT
9	0-255	YELLOW
10	0-255	DIMMER
11	STROBE	
	0-9	NO FUNCTION
	10-99	STROBE FROM (SLOW TO FAST , 0-25Hz)
	100-109	NO FUNCTION

	110-179	LIGHTNING STROBE
	180-189	NO FUNCTION
	190-255	RANDOM STROBE
12	PRESET COLOR	
	0-10	NO FUNCTION
	11-255	PRESET COLOR (See Annex I for details)
13	CCT	
	0-9	NO FUNCTION
	10	1800K
	25	2200K
	40	2700K
	55	3000K
	70	3200K
	85	4000K
	100	4500K
	115	5000K
	130	5600K
	145	6000K
	160	6500K
	175	7000K
	190	8000K
	205	10000K
	255	10000K
14	0-255	CRI from min. to max
15	0-255	ZOOM
16	CONTROL (EXECUTE AFTER 3 SECONDS)	
	0-10	NO FUNCTION
	11-15	PAN/TILT BLACK ACTIVATED
	16-20	PAN/TILT BLACK DEACTIVATED
	21-25	PAN INVERT
	26-30	TILT INVERT
	31-35	PAN/TILT INVERT OFF
	36-40	PAN DEGREE 630
	41-45	PAN DEGREE 540
	46-100	RESERVED
	101-105	STUDIO
	106-110	POWER
	111-115	LIVE
	116-130	RESERVED
	131-135	DIMMER SPEED Halogen
	136-140	DIMMER SPEED LED
	141-145	DIMMER CURVE LINEAR
	146-150	DIMMER CURVE SQUARE LAW
	151-155	DIMMER CURVE INV. SQUARE LAW
	156-160	DIMMER CURVE S-CURVE
	161-165	1200Hz

	166-170	2400Hz
	171-175	4000Hz
	176-180	6000Hz
	181-185	25000Hz
	186-200	RESERVED
	201-205	ALL RESET
	206-210	XY RESET
	211-215	ZOOM RESET
	216-250	RESERVED
	251-255	NO FUNCTION

PIXEL (28CH)	Value	Function
1	0-255	PAN
2	0-255	PAN FINE
3	0-255	TITL
4	0-255	TITL FINE
5	0-255	PT SPEED
6	PAN Motor continuous rotation	
	0-63	stop rotation by spinout
	64-127	stop rotation by shortcut
	128-189	Forwards Pan rotation from fast to slow
	190-193	No rotation
	194-255	Backwards Pan rotation from slow to fast
7	0-255	ZOOM
8	CONTROL (EXECUTE AFTER 3 SECONDS)	
	0-10	NO FUNCTION
	11-15	PAN/TILT BLACK ACTIVATED
	16-20	PAN/TILT BLACK DEACTIVATED
	21-25	PAN INVERT
	26-30	TILT INVERT
	31-35	PAN/TILT INVERT OFF
	36-40	PAN DEGREE 630
	41-45	PAN DEGREE 540
	46-100	RESERVED
	101-105	STUDIO
	106-110	POWER
	111-115	LIVE
	116-130	RESERVED
	131-135	DIMMER SPEED Halogen
	136-140	DIMMER SPEED LED
	141-145	DIMMER CURVE LINEAR
	146-150	DIMMER CURVE SQUARE LAW
	151-155	DIMMER CURVE INV. SQUARE LAW
	156-160	DIMMER CURVE S-CURVE
	161-165	1200Hz

	166-170	2400Hz
	171-175	4000Hz
	176-180	6000Hz
	181-185	25000Hz
	186-200	RESERVED
	201-205	ALL RESET
	206-210	XY RESET
	211-215	ZOOM RESET
	216-250	RESERVED
	251-255	NO FUNCTION
9	0-255	DIMMER
10	STROBE	
	0-9	NO FUNCTION
	10-99	STROBE FROM (SLOW TO FAST , 0-25Hz)
	100-109	NO FUNCTION
	110-179	LIGHTNING STROBE
	180-189	NO FUNCTION
	190-255	RANDOM STROBE
11	PRESET COLOR	
	0-10	NO FUNCTION
	11-255	PRESET COLOR (See Annex I for details)
12	CCT	
	0-9	NO FUNCTION
	10	1800K
	25	2200K
	40	2700K
	55	3000K
	70	3200K
	85	4000K
	100	4500K
	115	5000K
	130	5600K
	145	6000K
	160	6500K
	175	7000K
	190	8000K
	205	10000K
	255	10000K
13	0-255	CRI from min. to max
14	0-255	RED 1
15	0-255	GREEN 1
16	0-255	BLUE 1
17	0-255	WHITE 1
18	0-255	AMBER 1
19	0-255	RED 2
20	0-255	GREEN 2

21	0-255	BLUE 2
22	0-255	WHITE 2
23	0-255	AMBER 2
24	0-255	RED 3
25	0-255	GREEN 3
26	0-255	BLUE 3
27	0-255	WHITE 3
28	0-255	AMBER 3

Annex 1

PRESET COLOR	Value	Color Names		x	y
	0-10	NO FUNCTION			
	11-15	RESERVE	Loving Amber	0.407	0.321
COLOR 1	16-20	R40	Light Salmon	0.499	0.321
COLOR 2	21-25	L24	Scarlet	0.561	0.296
COLOR 3	26-30	L164	Flame Red	0.659	0.302
	31-35	RESERVE	Easy White	0.389	0.344
	36-40	RESERVE	Warm Peach	0.448	0.353
COLOR 4	41-45	L08	Dark Salmon	0.498	0.347
COLOR 5	46-50	L25	Sunset Red	0.566	0.359
	51-55	RESERVE	Medium Bastard Amber	0.37	0.335
COLOR 6	56-60	L237	CID(To Tungsten)	0.43	0.365
COLOR 7	61-65	R321	Soft Golden Amber	0.477	0.406
COLOR 8	66-70	L652	Urban Sodium	0.535	0.399
	71-75	RESERVE	LCT Yellow(Y1)	0.34	0.363
COLOR 9	76-80	L765	LEE Yellow	0.389	0.412
COLOR 10	81-85	L513	Ice And A Slice	0.38	0.447
	86-90	RESERVE	Spring Yellow	0.41	0.502
	91-95	RESERVE	LEE Plus Green	0.324	0.388
	96-100	RESERVE	CalColor 30 Green	0.318	0.44
	101-105	RESERVE	Fern Green	0.234	0.543
COLOR 11	106-110	L90	Dark Yellow Green	0.184	0.641
	111-115	RESERVE	LEE Fluorescent3600K	0.286	0.37
COLOR 12	116-120	R92	Tuquoise	0.235	0.36
	121-125	RESERVE	Kelly Green	0.185	0.459
	126-130	RESERVE	Forest Green	0.162	0.496
	131-135	RESERVE	Cosmetic Aqua Blue	0.3	0.318
COLOR 13	136-140	L728	Steel Green	0.256	0.302
COLOR 14	141-145	L117	Steel Blue	0.223	0.278
COLOR 15	146-150	L354	Special Steel Blue	0.173	0.265
	151-155	RESERVE	Paler Lavender	0.284	0.284
COLOR 16	156-160	L501	New Colour Blue	0.246	0.249
COLOR 17	161-165	L174	Dark Steel Blue	0.204	0.205
	166-170	RESERVE	Daylight Blue	0.159	0.158
	171-175	RESERVE	Pale Lavender	0.288	0.254
	176-180	RESERVE	Surprise Pink	0.24	0.183
COLOR 18	181-185	L142	Pale Violet	0.209	0.148
	186-190	RESERVE	Perfect Lavender	0.177	0.07
	191-195	RESERVE	Light Pink	0.335	0.289
COLOR 19	196-200	L794	Pretty'n Pink	0.335	0.251
COLOR 20	201-205	L328	Follies Pink	0.335	0.18
	206-210	RESERVE	Magical Magenta	0.327	0.138
	211-215	RESERVE	Pale Rose	0.35	0.318
COLOR 21	216-220	L127	Smokey Pink	0.397	0.265
COLOR 22	221-225	L192	Flesh Pink	0.41	0.237
	226-230	RESERVE	Special Rose Pink	0.465	0.193
	231-235	RESERVE	Moroccan Pink	0.378	0.324
COLOR 23	236-240	L157	Pink	0.457	0.272
COLOR 24	241-245	R332	Cherry Rose	0.489	0.295
	246-250	RESERVE	Cool LED Bright Pink	0.57	0.263
	251-255	NO FUNCTION			



广州市雅江光电设备有限公司

Guangzhou Yajiang Photoelectric Equipment Co., Ltd.

电话/Tel : 020-86947788 邮箱/E-mail : sales@yajiang.cn

传真/Fax : 020-86943773 网址/Website : www.yajiang.cn